


How to Measure for Blinds

The easy & simple method for measuring blinds

Measuring for your new blinds couldn't be simpler. It's an easy way to save lots of money and takes just minutes; you'll wish you'd done it sooner! All you have to do is follow our easy, step-by-step guides below.



Inside Recess / Mount

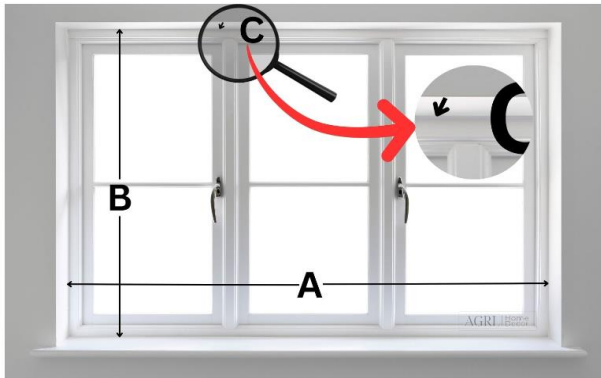

Step A - Measure the top width inside the window opening. If tiles or other materials cover part of the inside of the opening, consider measuring the opening at its narrowest spot and recording that measurement.

Step B - Measure the middle height inside the window opening.


Step C - Measure the depth of the window opening from the front edge back to the first obstruction. To mount inside the window frames, a minimum depth of 2" inches or 5 cm is required. Consider obstacles such as cranks, handles, and window opening directions.

Outside Recess / Mount

Step A - Measure the width of the window opening. For windows without trim add 4-6" inches or (10 - 15 cm) per side, for windows with trim measure to outer edges of trim.

Step B - Measure the height of the window opening. For windows without trim add 4 - 6" inches or (10 - 15 cm), for windows with trim measure to the outer edges of trim.

Note - A flat surface is required, on the frame or the wall. Consider mounting direct on the frame if the frame protrudes more than 1" from the wall.

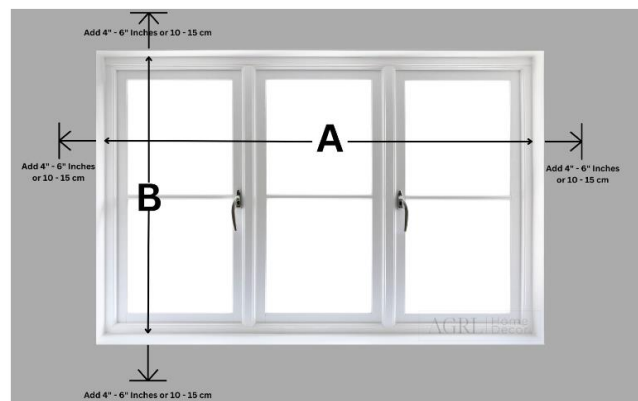

More Information on measuring

<https://agrIk.com/how-to-measure-blinds>